


Parallax Driver Download Instructions


These instruction pages are dedicated to explaining how to download and install the driver required for interfacing the Parallax board with a PC. If opening this file in Firefox, click “Save As” if prompted and save the .pdf file in a location that can be easily found. In Chrome and IE, the .pdf should automatically open. All instructions done below were done using Google Chrome.

1. Click the link labeled “driver” to download the necessary files for installation.

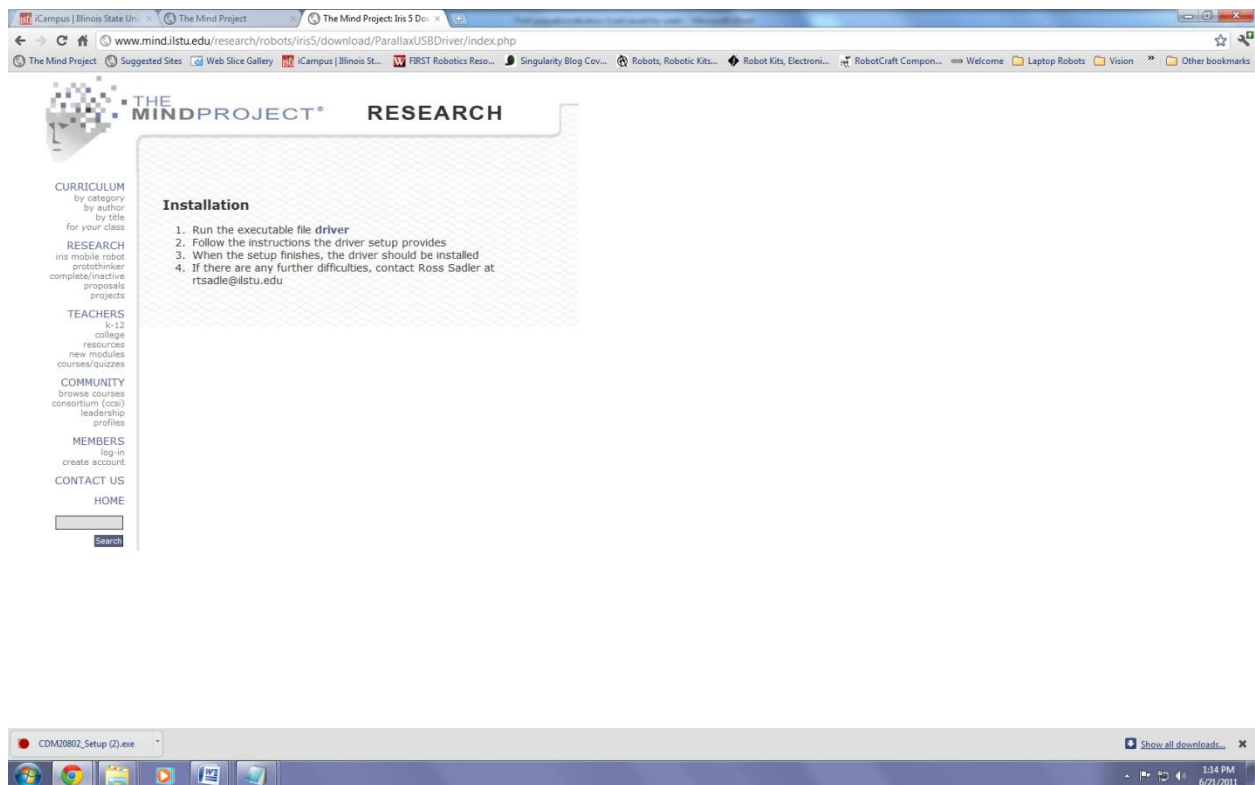

2. Click on to open the downloaded file (CDM20802_Setup.exe) to begin installation. If using Firefox, a prompt should appear. Click “Save File” and click on the downloaded file (CDM20802_Setup.exe) once it has finished downloading.

3. Once the installation starts, a screen like this should appear:

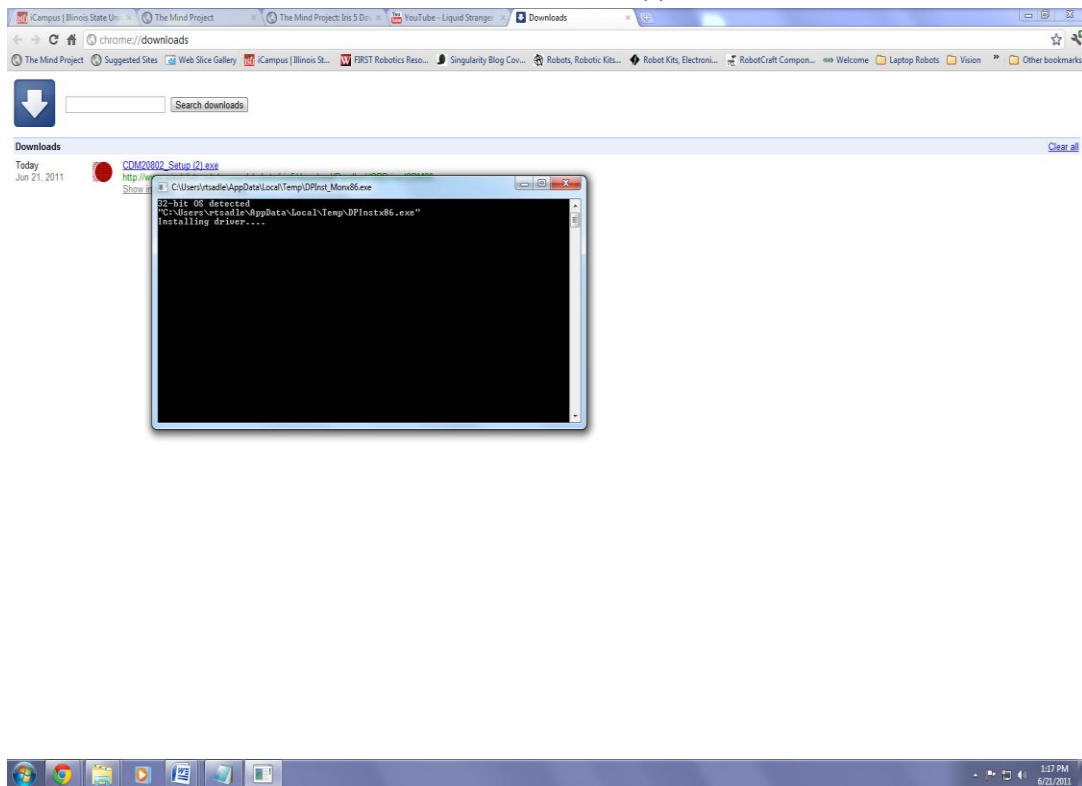

4. The installation will continue until it is completed. Once the driver is installed, refer to the Parallax Software installation instructions to install and load the necessary programs onto your computer and Parallax controller.